


2 Install Transmission

- 1 Insert input shaft into release bearing assembly.

Release bearing assembly middle tab must point up.

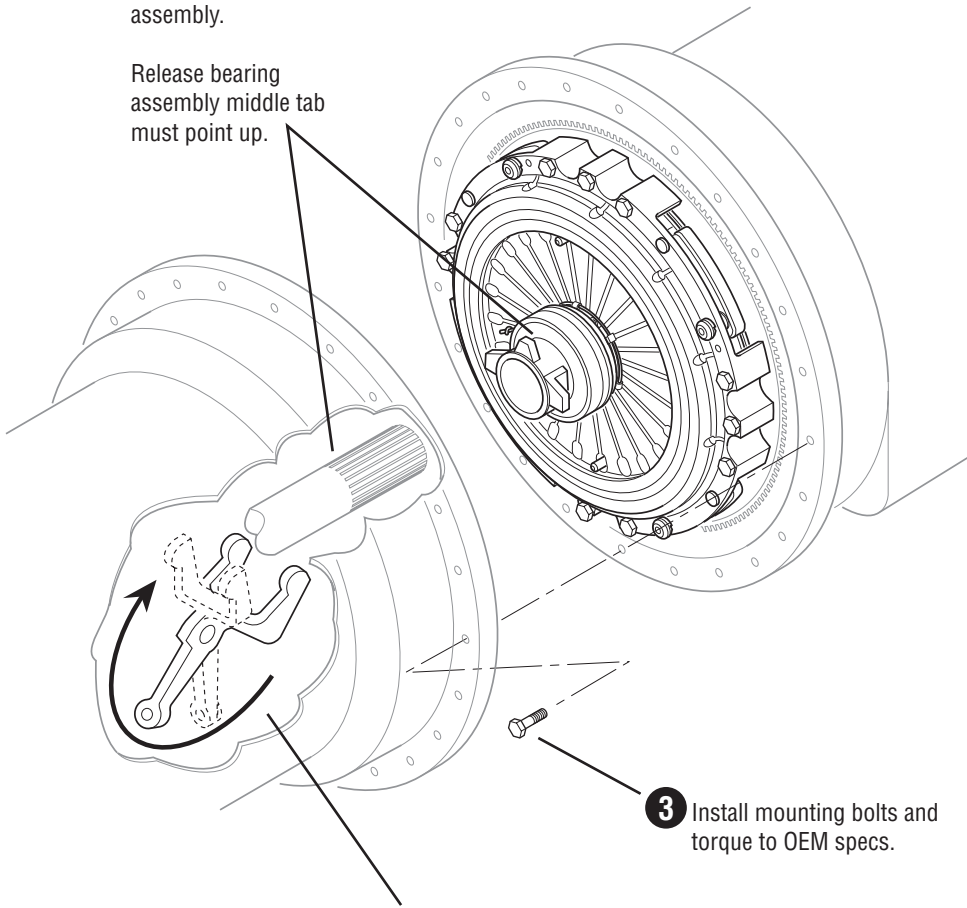

- 2 Rotate release yoke so yoke fingers will pass under the tabs on the release bearing assembly.

Continue to install transmission, release yoke will swing into position.

- 3 Install mounting bolts and torque to OEM specs.

430 mm Clutch Installation Procedure

1 Install Clutch to Flywheel

2 Install Transmission

Eaton® Fuller®
430 mm Clutches

Eaton Corporation
Clutch Division
201 Brandon Street
Auburn, IN 46706

CLMT-0430
02/05 WP

Copyright Eaton Corporation, 2001.
All rights reserved.

EATON

1 Install Clutch to Flywheel

